



Ports used by Netfonic Adapters

The following ports are needed for **OUTGOING** Internet communications from the Netfonic device to the Netfonic servers.

DNS: Port **53 UDP**

TFTP: Port **69 UDP**

HTTP: Port **80 UDP**

NTP: Port **123 UDP**

SIP: Port **5060 UDP**

The following ports are needed for **INCOMING** and **OUTGOING** Internet communications from and to Netfonic devices and servers.

RTP (Voice) Traffic: Ports **10000-20000 UDP**. When a call is made, a random port between 10000 and 20000 is used for RTP (Voice) traffic. If any of these ports are blocked, you may experience one way or no audio.