

The Mediatrix 1102 can be directly plugged into a network and provisioned with a DHCP server. It is strongly recommended to set your DHCP server before installing the unit on the network. See the *Administration Manual* for more details. If you are experiencing problems, or if you do not want to use a DHCP server, you must perform a Recovery Mode procedure.

Reserving an IP Address

Before connecting the Mediatrix 1102 to the network, Mediatrix Telecom, Inc. strongly suggests that you reserve an IP address in your DHCP server for the unit you are about to connect. This way, you will know the IP address associated to a particular unit. DHCP servers reserve IP addresses for specific devices using a unique identifier for each device. The Mediatrix 1102 unique identifier is its media access control (MAC) address. The MAC address appears on the label located on the bottom side of the unit.

Connecting the Mediatrix 1102 Hardware

1. Connect analog telephones or fax machines into the *Phone/Fax* connectors.
Use a standard telecommunication cord with a minimum of 26 AWG wire size.
2. Connect a 10/100 BaseT Ethernet RJ-45 cable into the *Network* connector of the Mediatrix 1102 and connect the other end to a compatible Ethernet interface that supplies TCP/IP network access (e.g. router, switch, hub or computer).
Use a standard telecommunication cord with a minimum of 26 AWG wire size.
This port can be used as a remote power feeding, IEEE 802.3af compliant and Power DSine certified, if the LAN offers the capability.
3. Connect a 10/100 BaseT Ethernet RJ-45 cable into the *Computer* connector of the Mediatrix 1102 and connect the other end to the network card of a computer.
In this case, the Mediatrix 1102 acts as a small Ethernet switch. Use a standard telecommunication cord with a minimum of 26 AWG wire size.
4. Connect the power cord to the Mediatrix 1102 and then connect the other end to an electrical outlet. The electrical outlet shall be installed near the Mediatrix 1102 so that it is easily accessible.
This step is not required if you are using the LAN-powered option.

Initial Provisioning Sequence

When starting the Mediatrix 1102 for the first time, it needs to be configured before it can support calls. This process is known as *provisioning*.

1. When the Mediatrix 1102 boots, it broadcasts a message requesting DHCP services (if the unit is configured to start in DHCP mode).
2. The DHCP server responds with a set of IP addresses and network parameters. The following are some of the network parameters assigned via DHCP:
 - Mediatrix 1102 IP address
 - Subnet Mask

- Default Router IP address
- Primary and Secondary DNS IP addresses
- Management Server IP address and port number
- SIP Servers IP address and port number

3. The Mediatrix 1102 uses the IP address of the Management Server to request its configuration.
4. The Management Server configures the Mediatrix 1102.

Recovery Mode Procedure

The Recovery mode assigns a static default IP address to the Mediatrix 1102.

1. Power the Mediatrix 1102 off by unplugging the power cord.
2. With a 10/100 Hub and two (2) 10/100 BaseT Ethernet RJ-45 straight cables, connect both cables to the Hub; one of them is connected into the *Network* connector of the Mediatrix 1102 and the other one links the computer to the Hub.
You must perform the recovery mode in a closed network and perform it on only one Mediatrix 1102 at a time, since the default IP address is the same on every unit.
3. Reconfigure the IP address of your computer to *192.168.0.10* and enter the Subnet Mask of *255.255.255.0*. Reboot your computer.
4. Insert a small paper clip into the *Default Settings* switch hole of the Mediatrix 1102 (located on the back of the unit). While depressing the *Default Settings* switch, power the unit on.
Hold the *Default Settings* switch just a few seconds until all LEDs start blinking. When releasing the *Default Settings* switch, only the *Power* and *Ready* LEDs should go on blinking to inform you that the recovery reset has been performed.
In recovery mode, the IP addresses and port numbers are set to their default values in the MIBs.
In this mode, only SNMP can be used to set IP addresses located under the *ipAddressConfig* folder in the MIB structure. See the *Administration Manual* and *MIB Reference Manual* for more details.
5. When the Mediatrix 1102 has finished its provisioning sequence, perform the changes you must do, then turn it off, plug it on the network, and turn it on again.

End User Technical Support

In order to maximize technical support resources, Mediatrix Telecom, Inc. works through its partner channels to resolve technical support issues. All end users requiring technical support are encouraged to contact their vendor directly.